
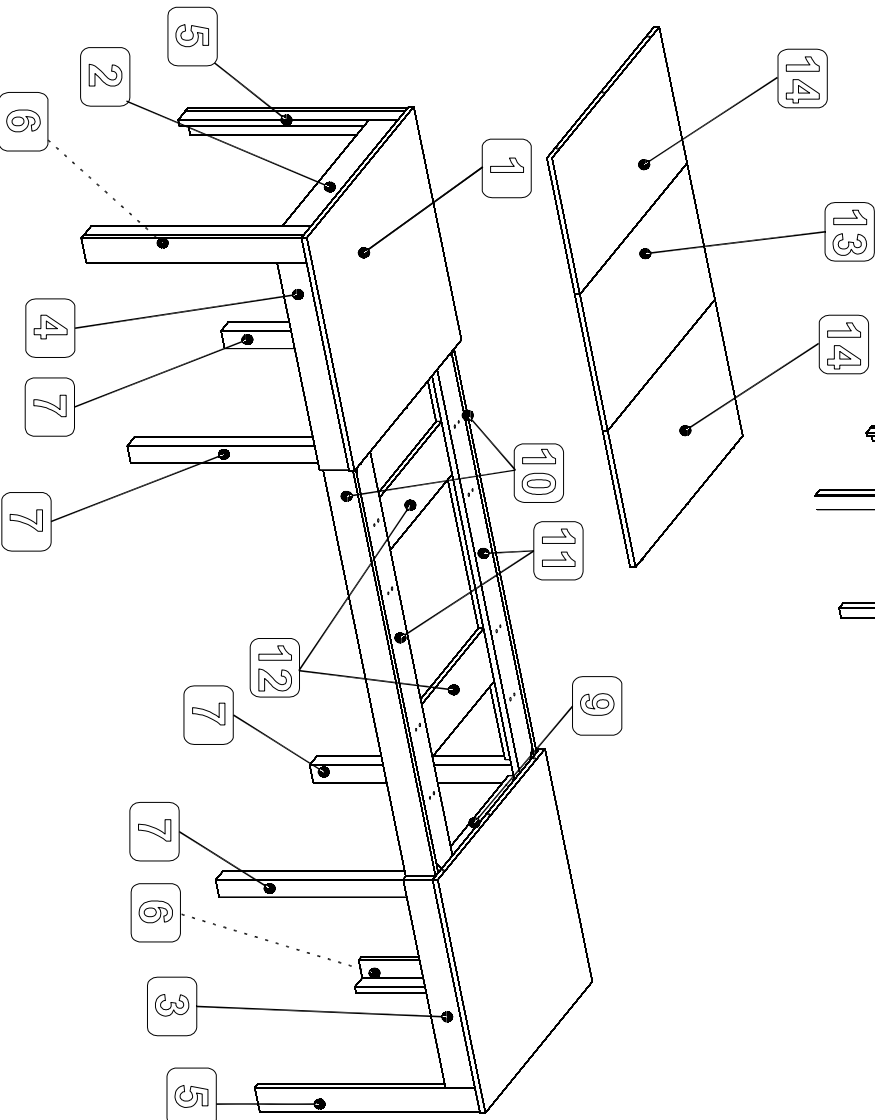
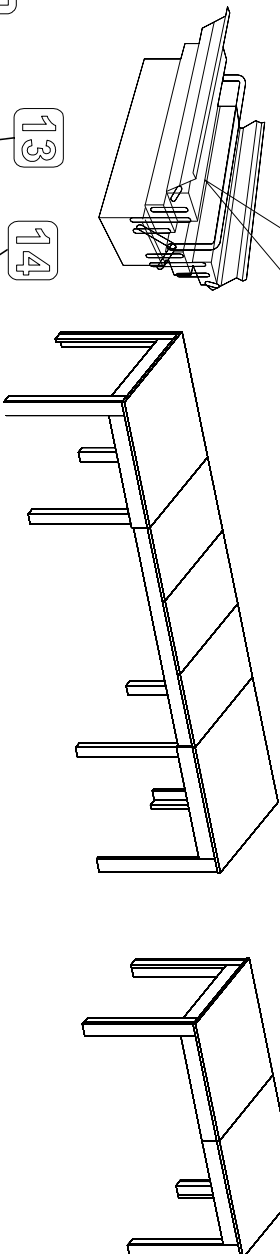
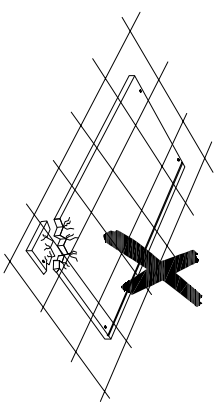
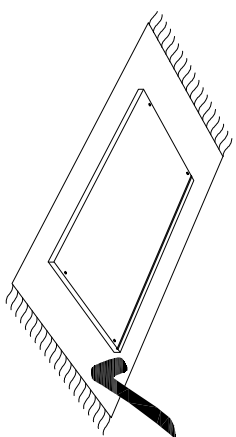
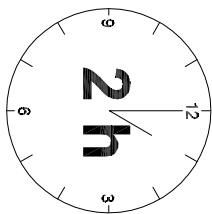
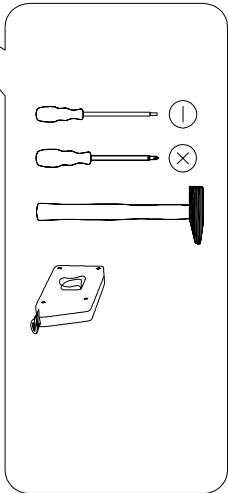
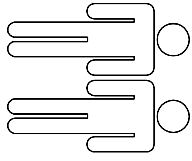


PL Instrukcja montażu


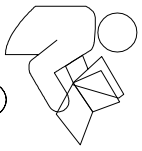


		L 50			
T01	X22 T02	X22	W06	X4 K01	X1


L 70	W18	X16 F03	X16	X08	X4	D01	X76

M0	X16 B06	X4 H01	X8	W07	X24

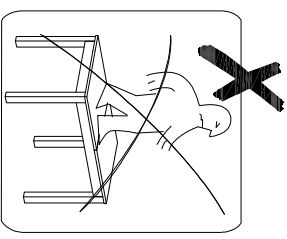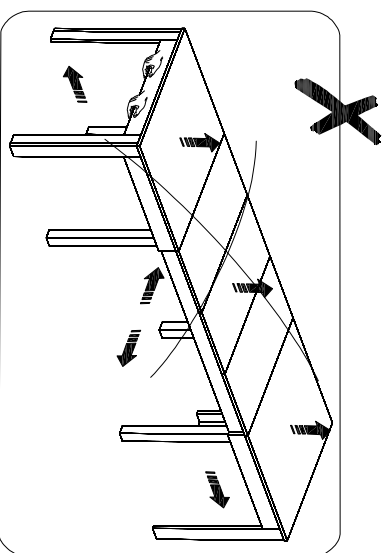

S01	X16


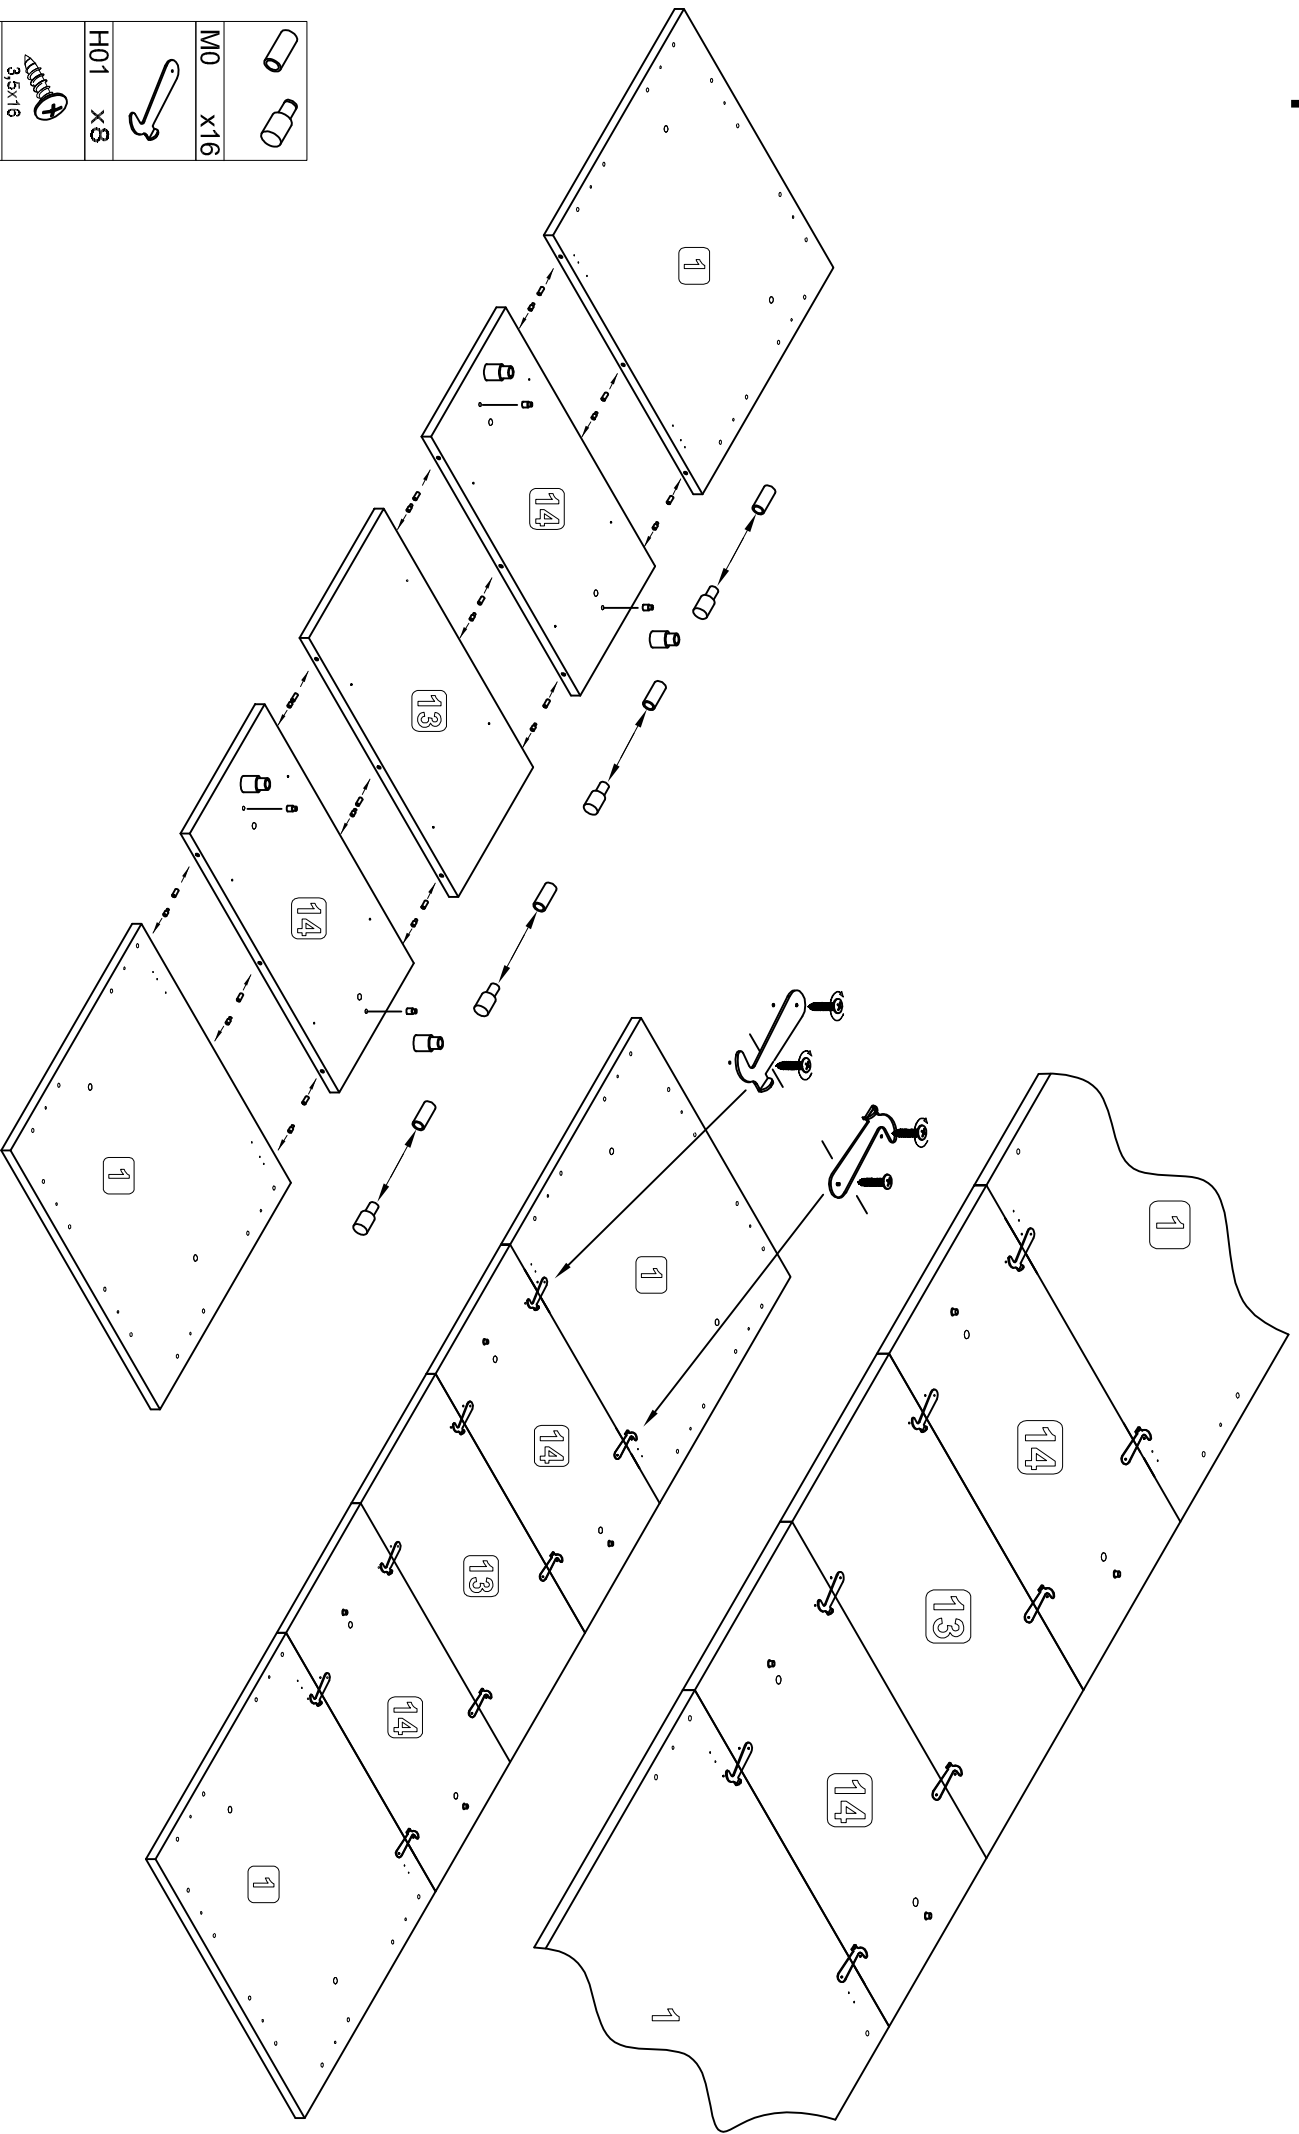


1




2


	
T01 X10	D01 X76
	φ8x30

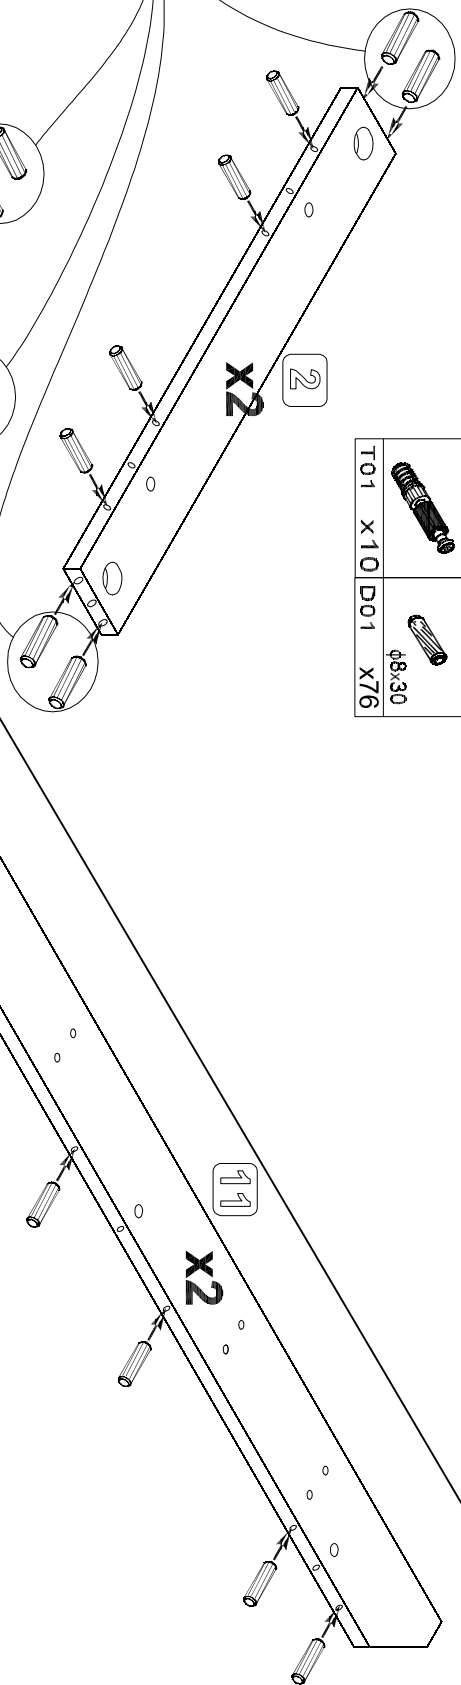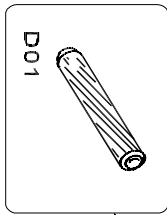


4

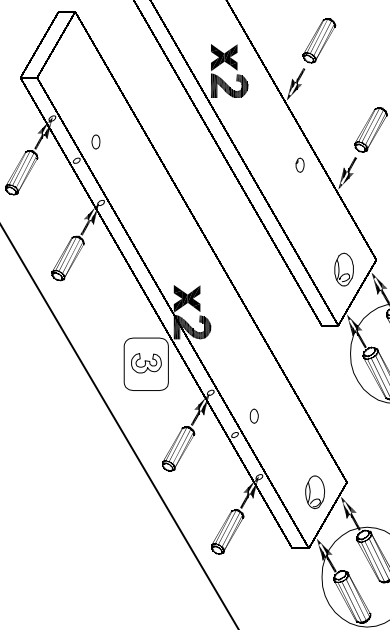

3


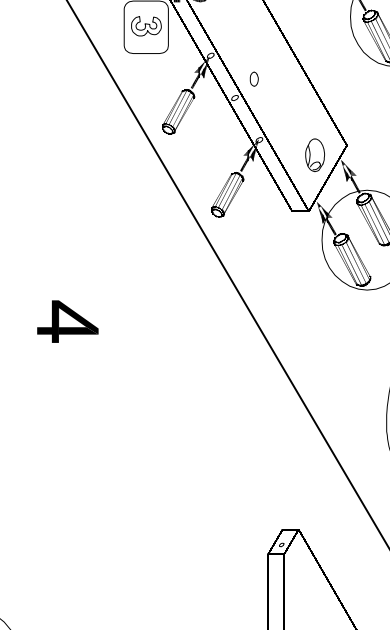


4

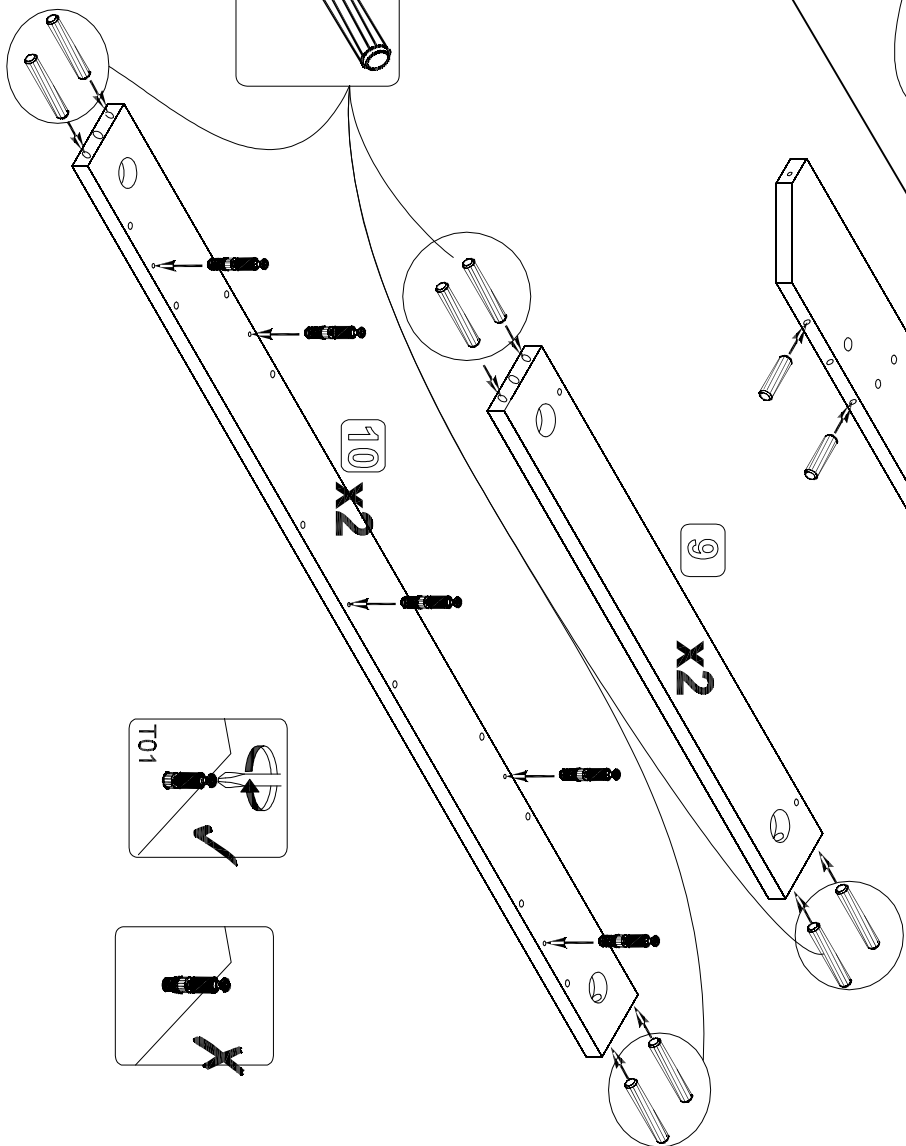


10

X2

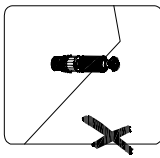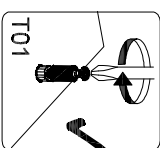



3

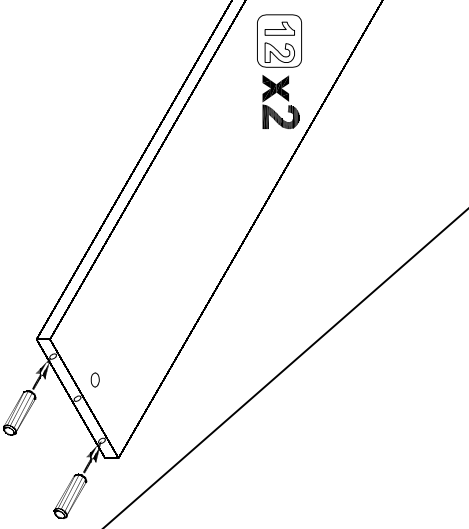




12

X2

5

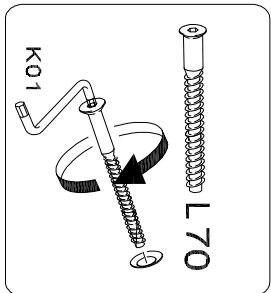
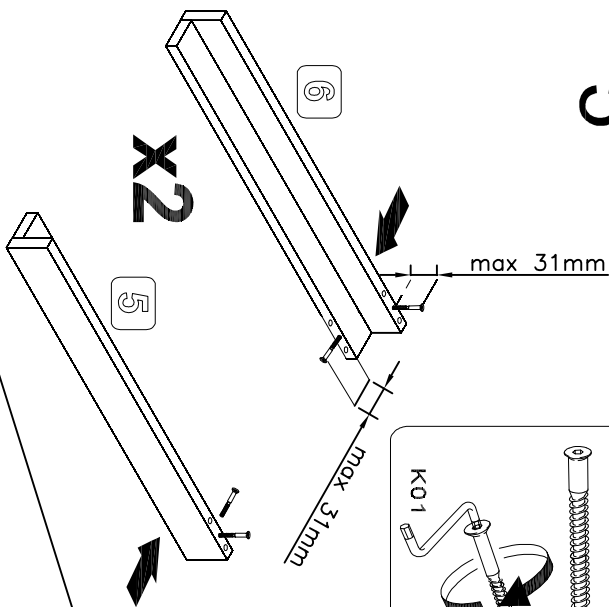


X2

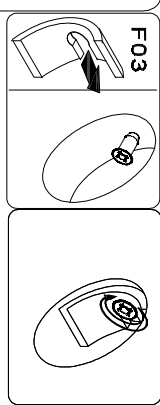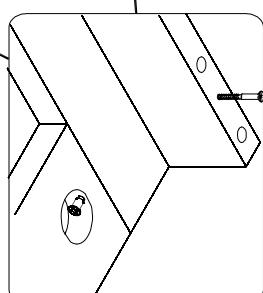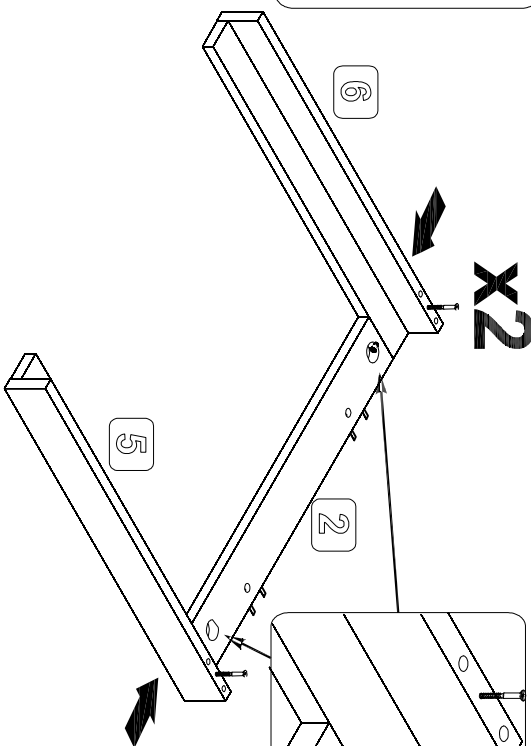


6

L 70	
W18 X8	
F03 X8	

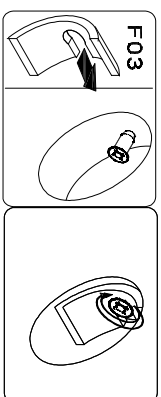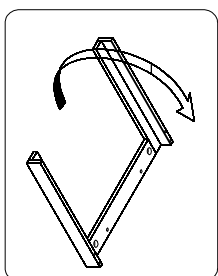

X2

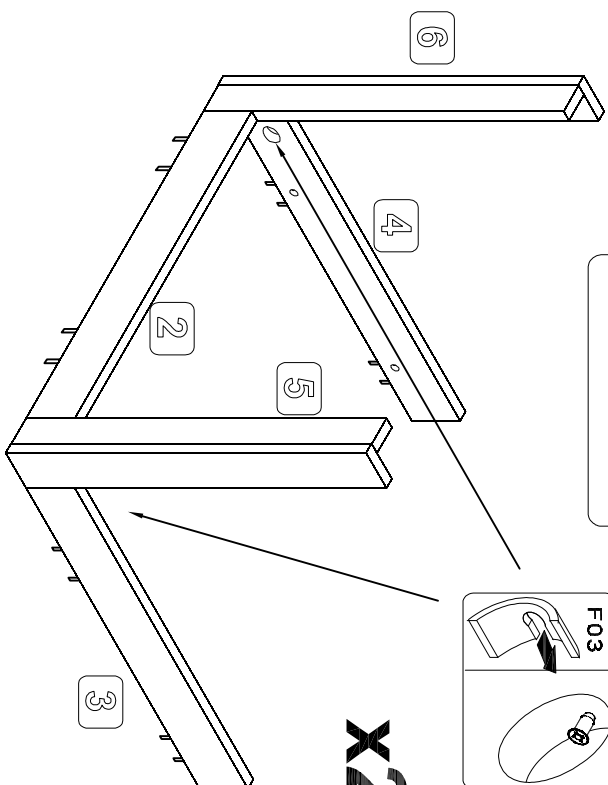

3

2


4

5

6


7

L 70
W/18 X8

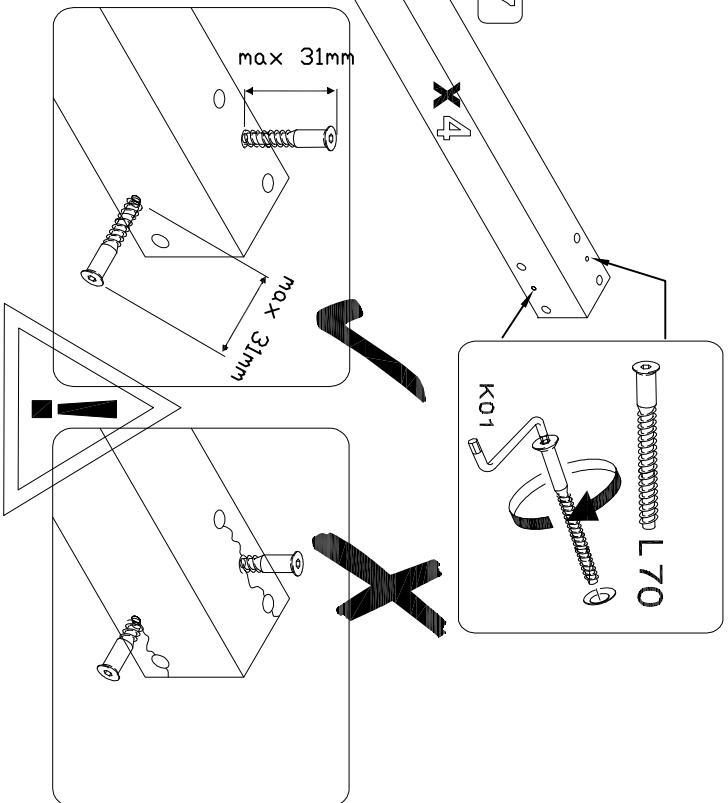

8


F03 X4 K01 X1

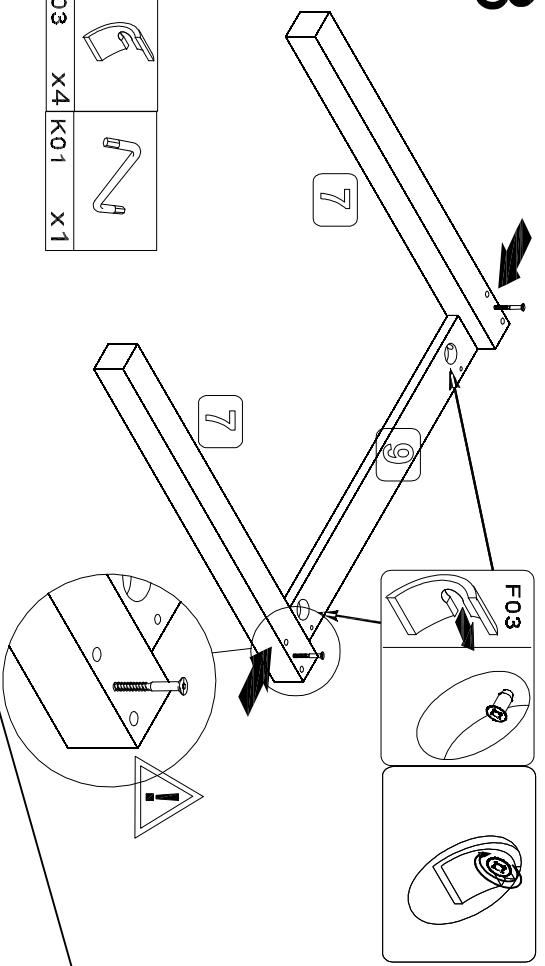

9


T02 X6

T02

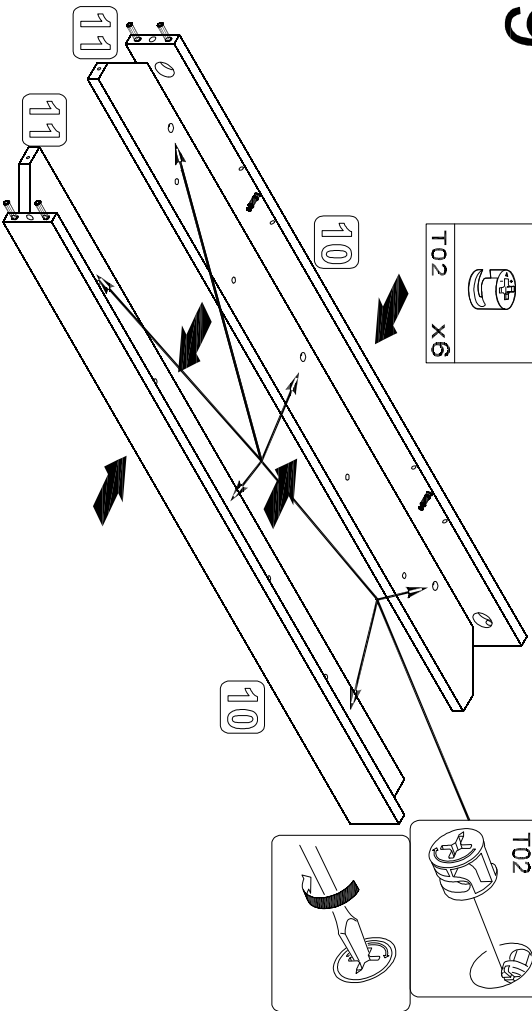


10


T02 X4

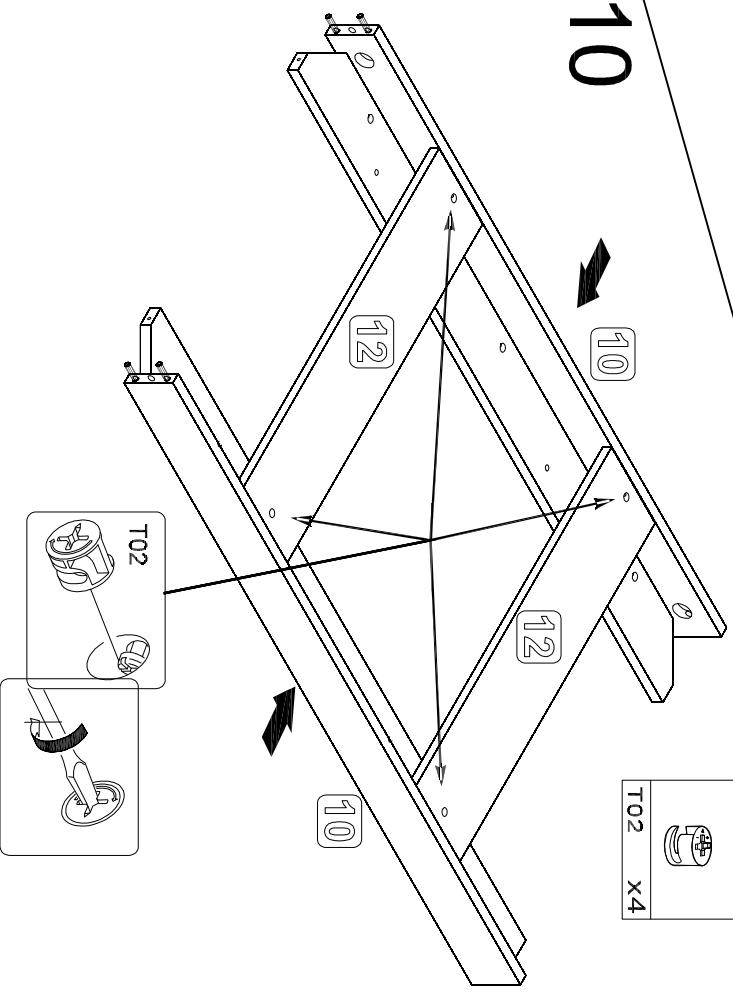


11

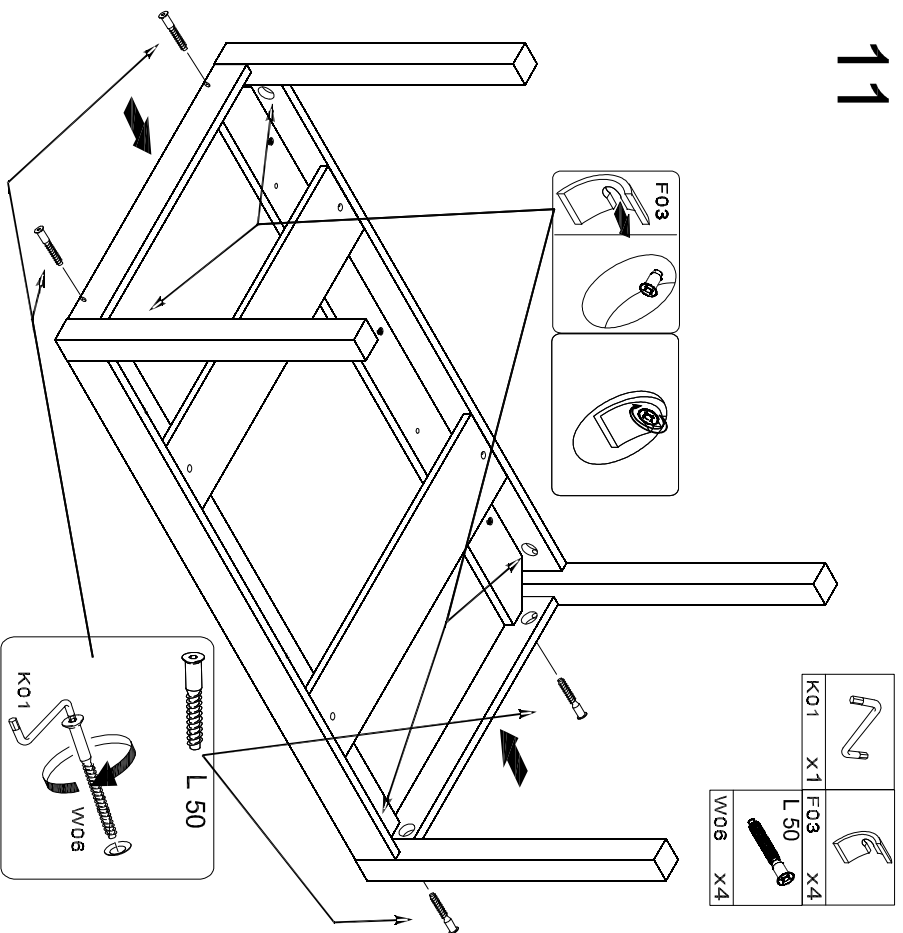


12

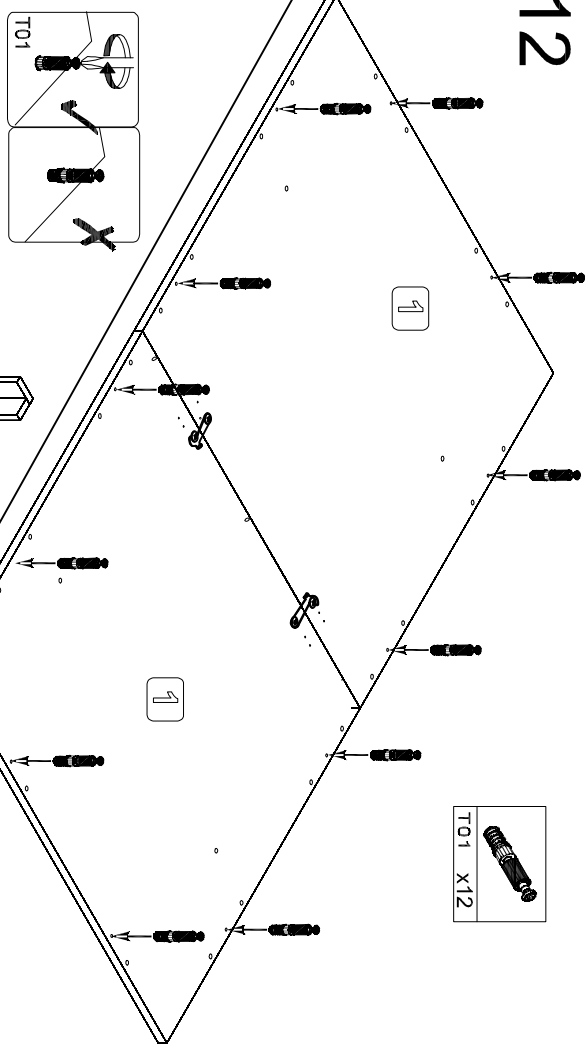




13

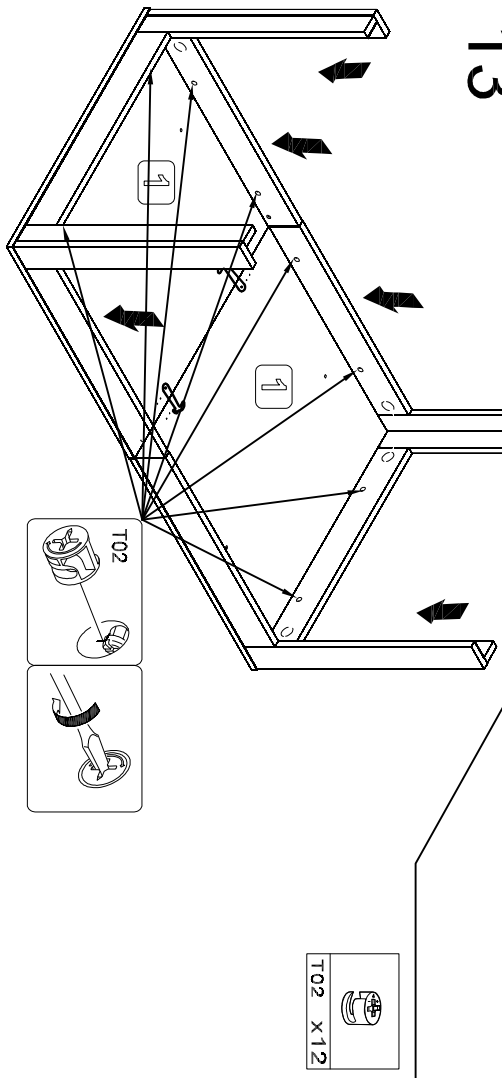


14

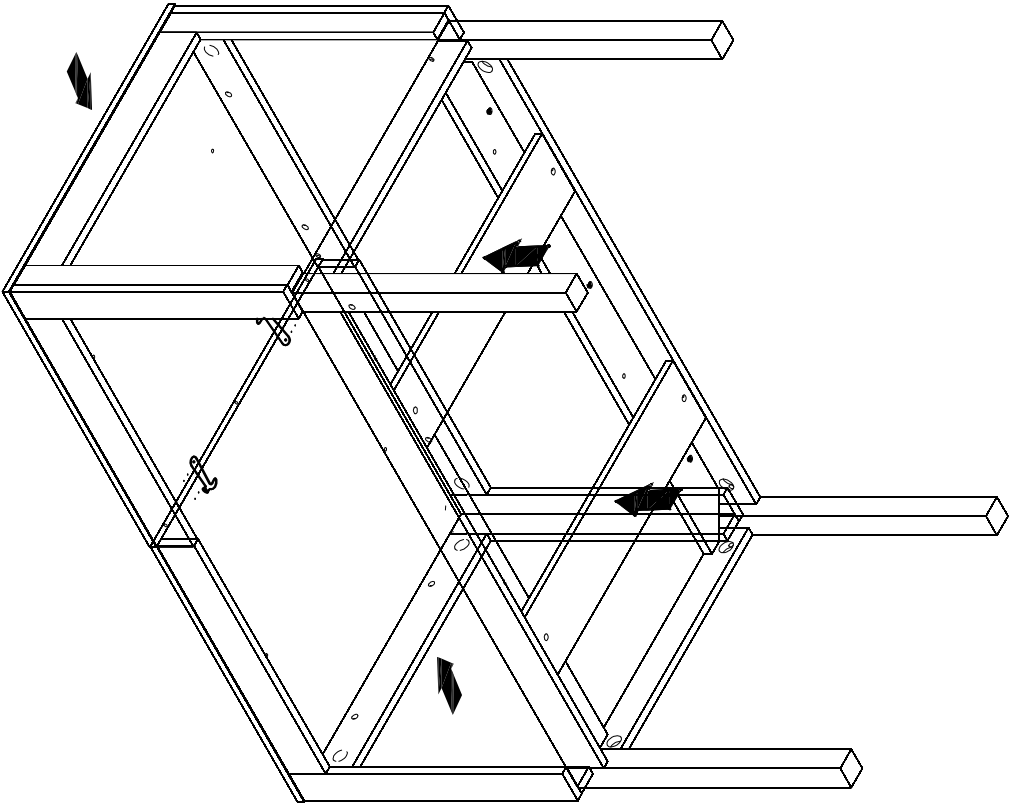

15

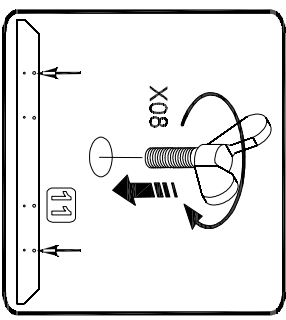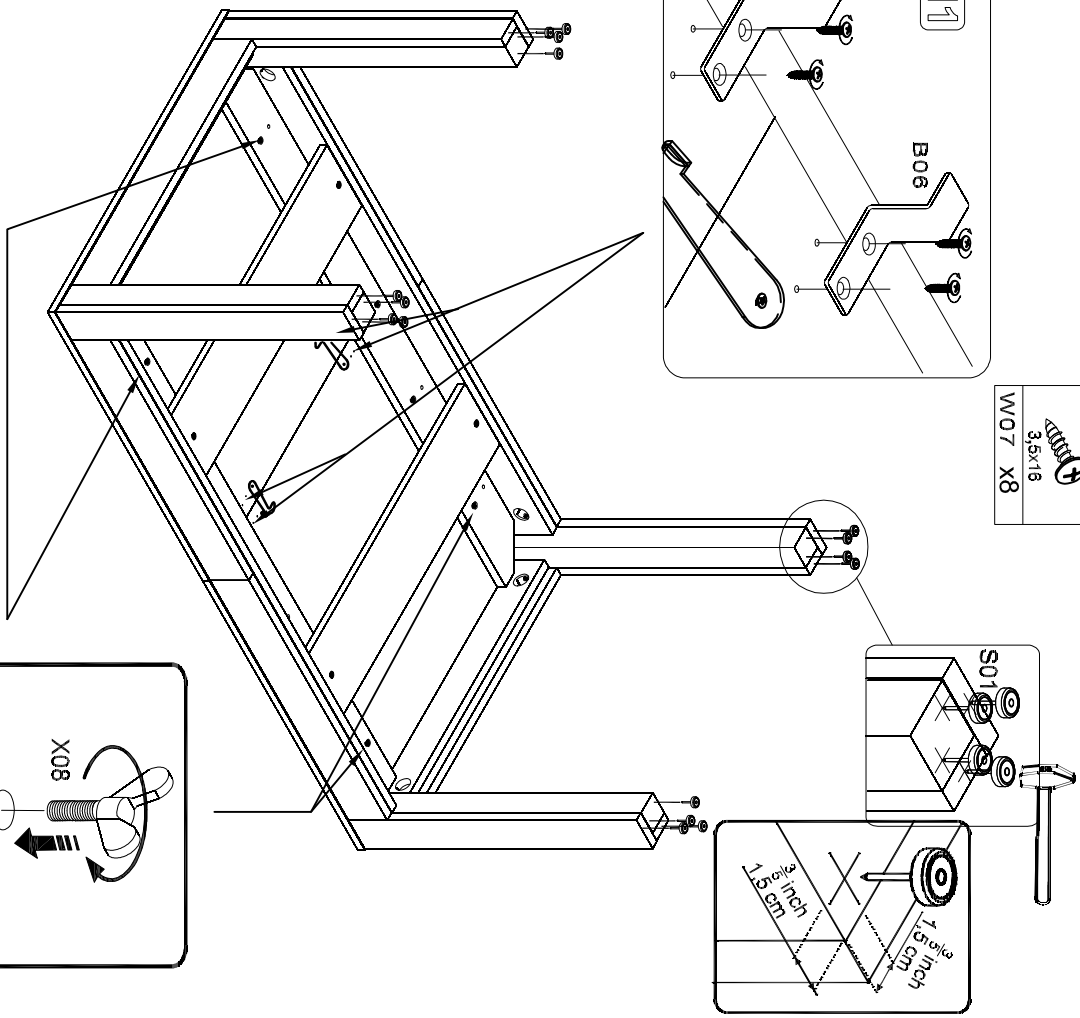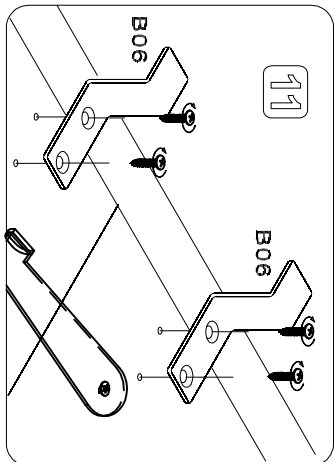

S01	X16	B06	X4	X08	X4	W07 X8

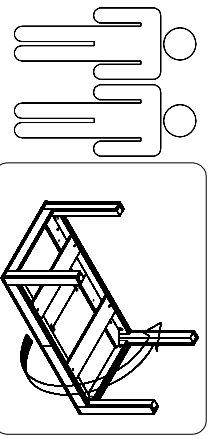

16

