




1.

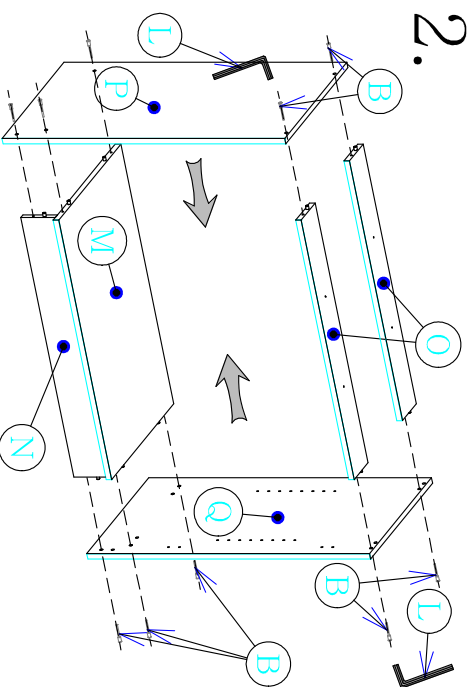


2.

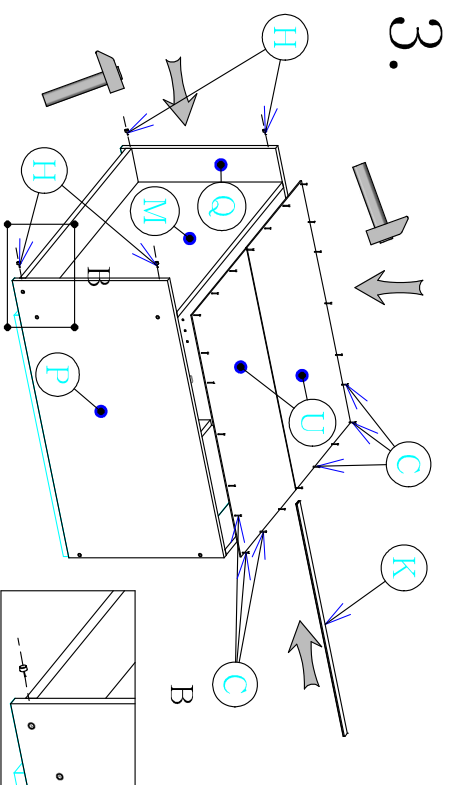


3.

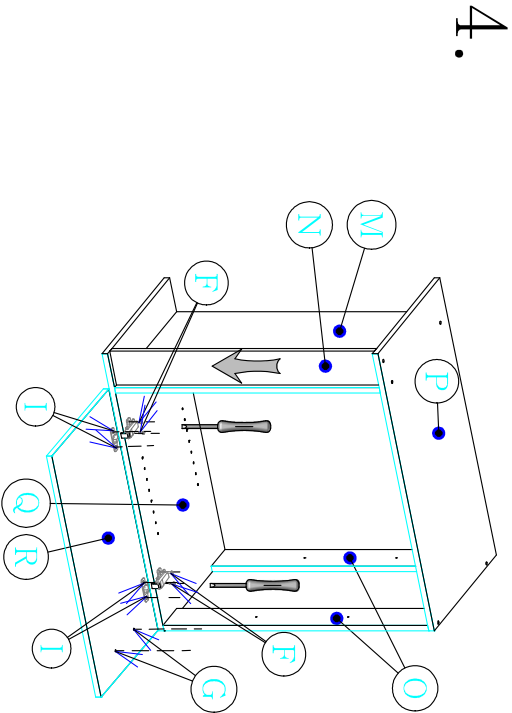


4.

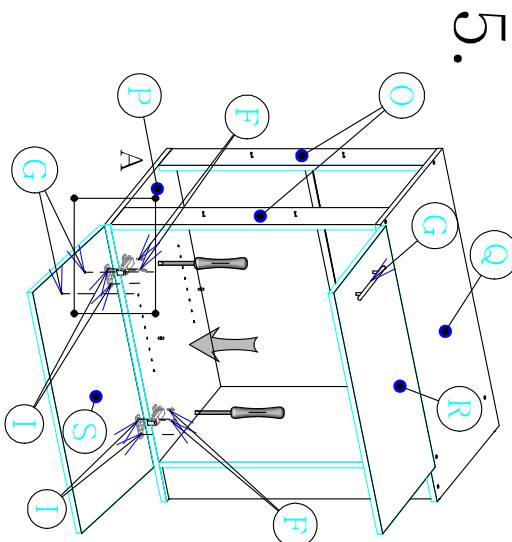


5.

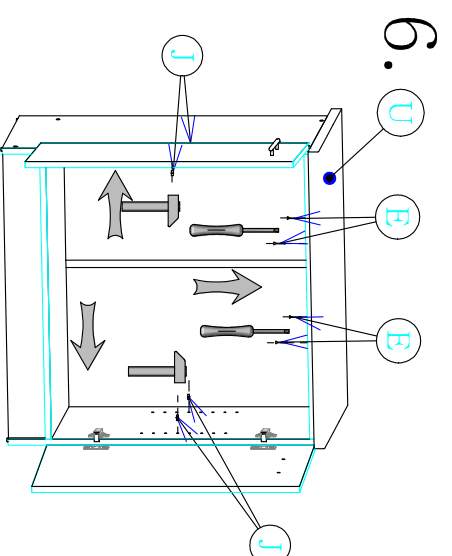

6.

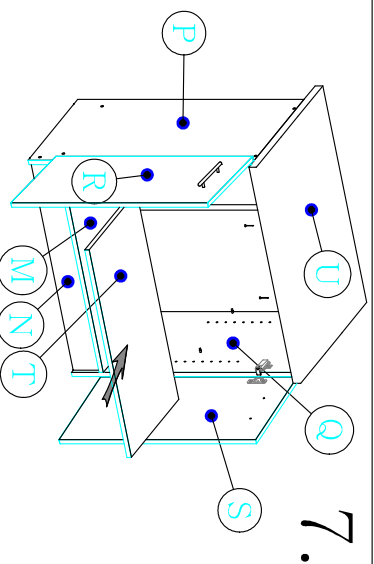

7.

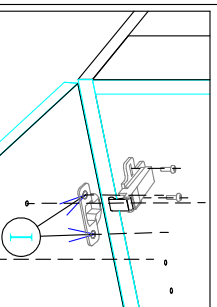

A

Assembly Instructions

HALMAR

1/1

D80



Perta

260cm













External tools needed for assembly: hammer, screwdriver

Optional tools : Power drill with screwdriver bit

Please follow steps

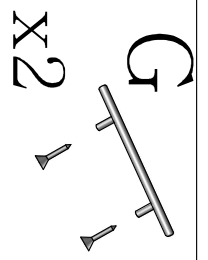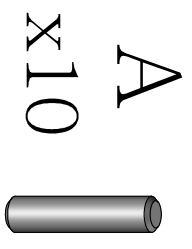

LA

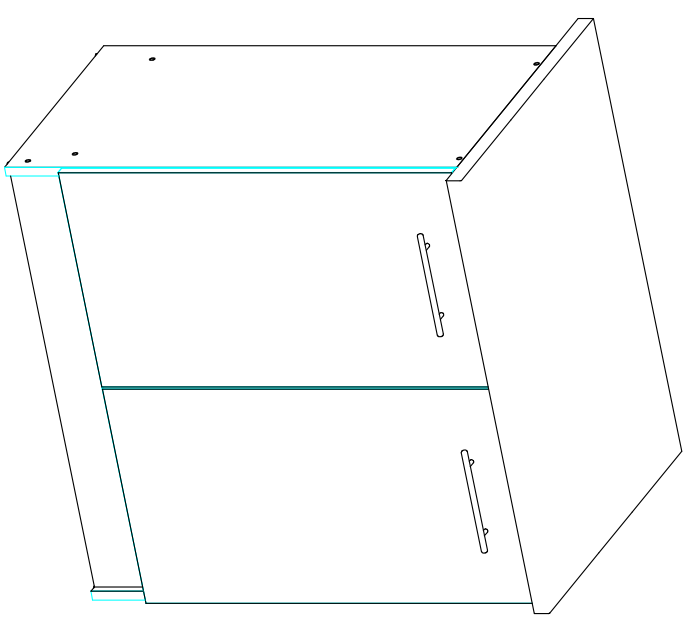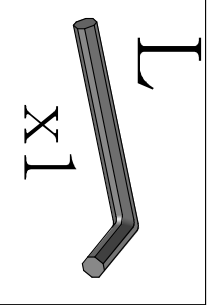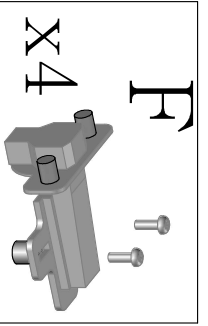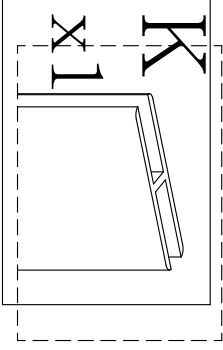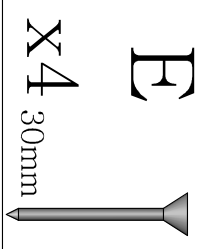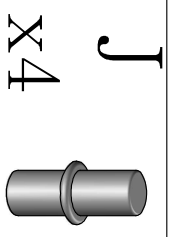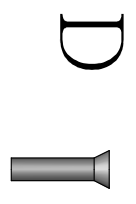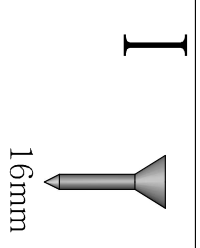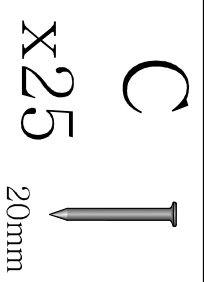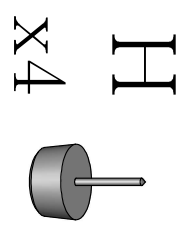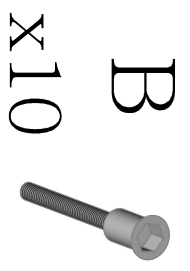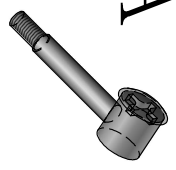

Assembly Instructions



2

D80_

External tools needed for assembly: hammer, screwdriver

Perla

Optional tools :Power drill with screwdriver bit

260cm

Please follow steps