

Assembly Instructions



1/1

G40-P















Perła

260cm

External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit

Please follow steps

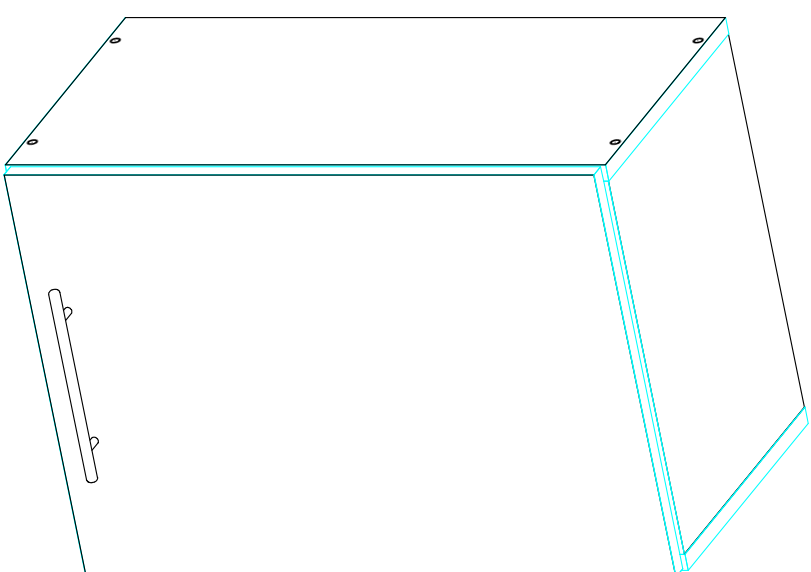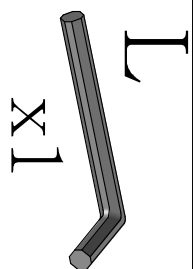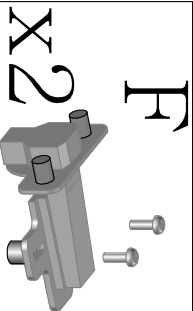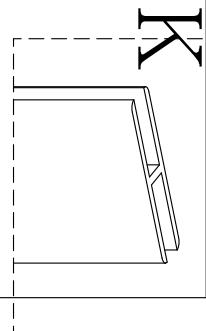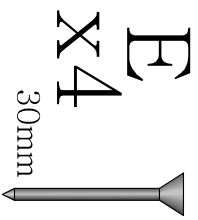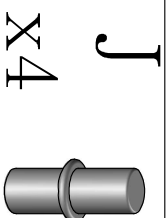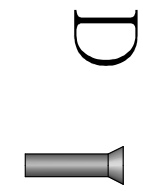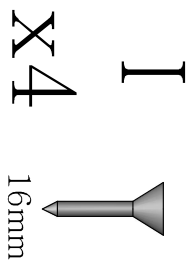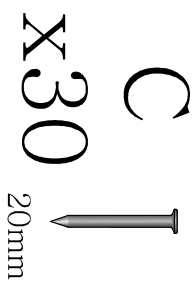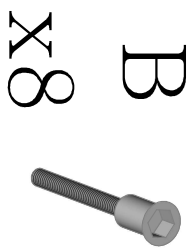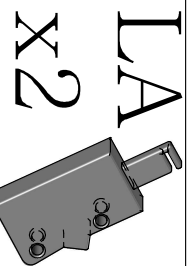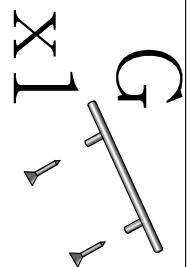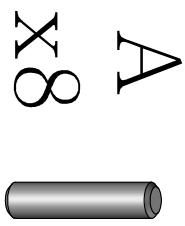

Assembly Instructions



1/1

G40-P-

External tools needed for assembly: hammer, screwdriver

Perla

Optional tools :Power drill with screwdriver bit

260cm

Please follow steps