



1.

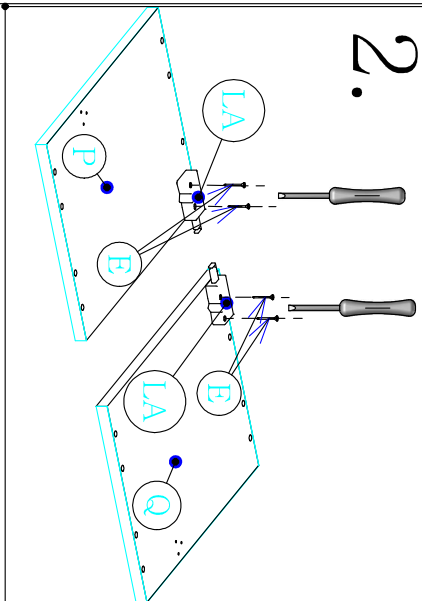


2.


5.

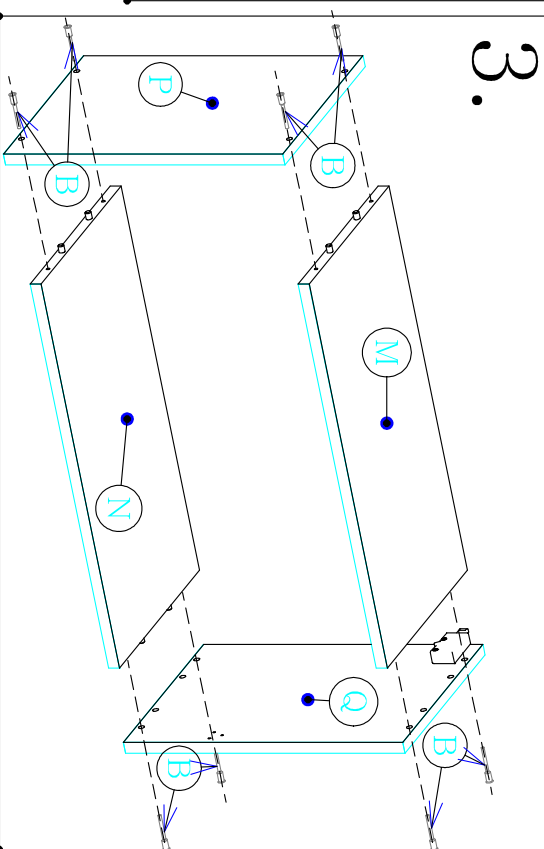

3.

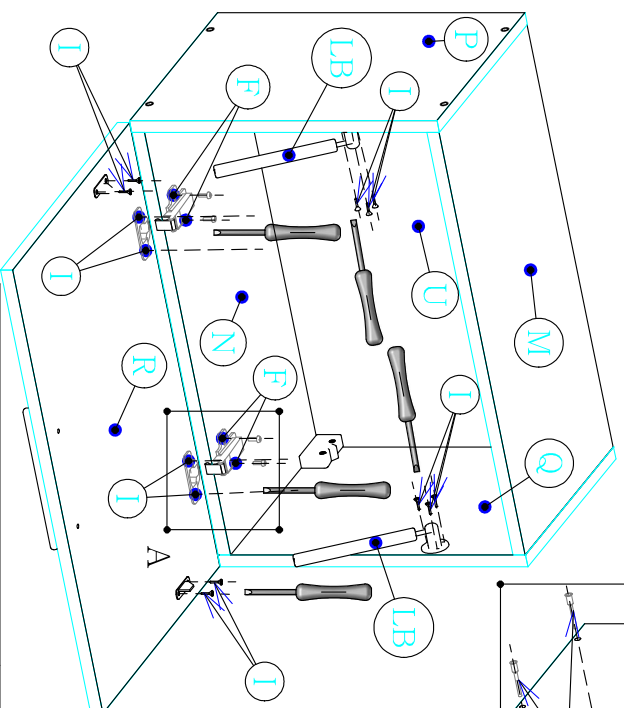

4.

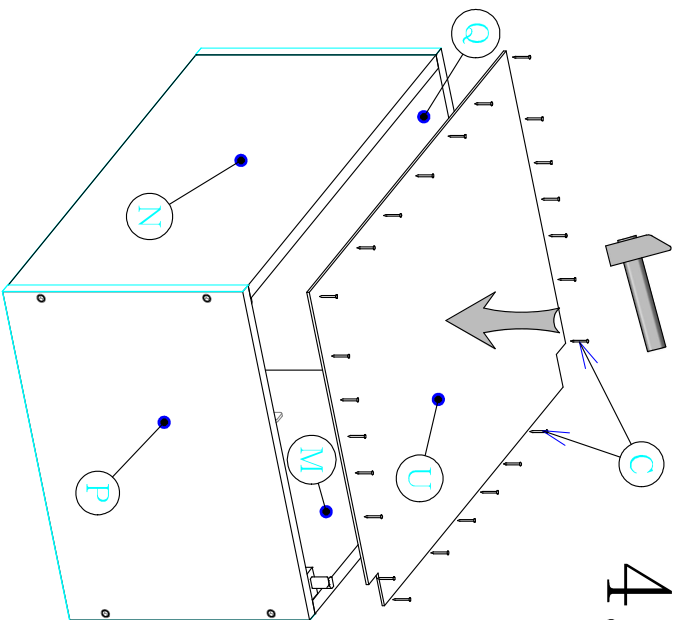

Assembly Instructions

G60-OK

Perta

260cm


HALMAR
















1/2

External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit

Please follow steps

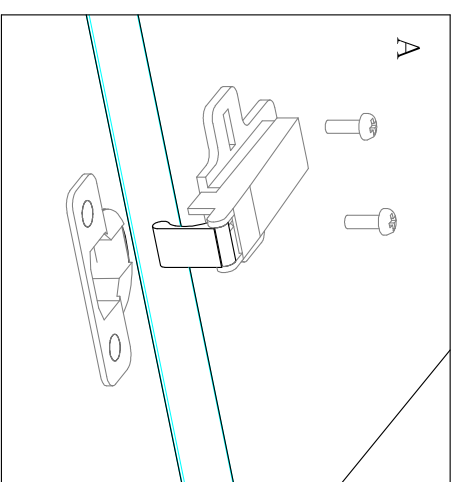

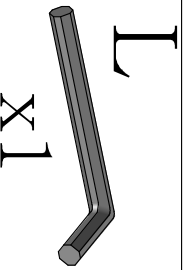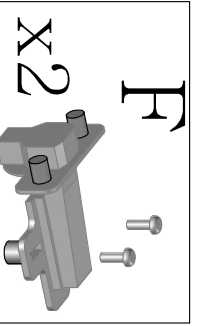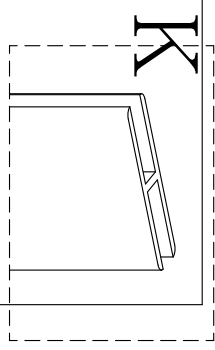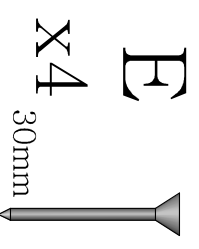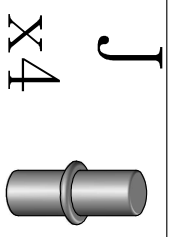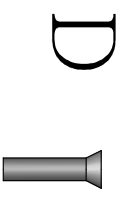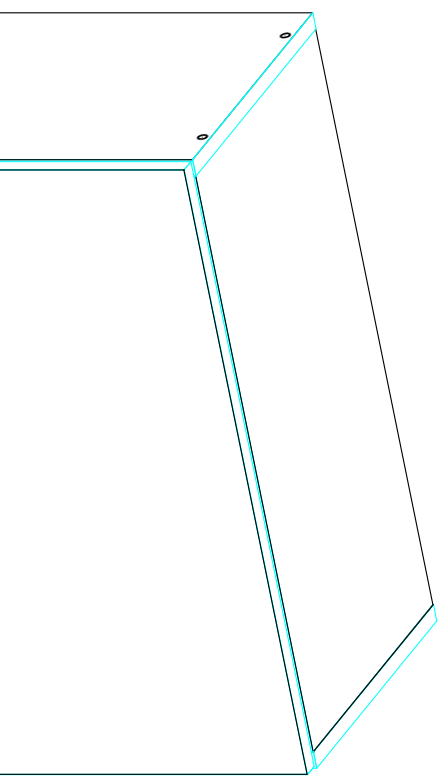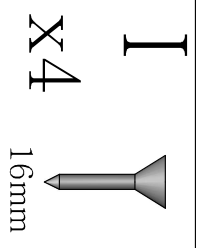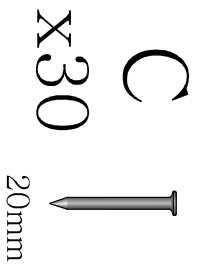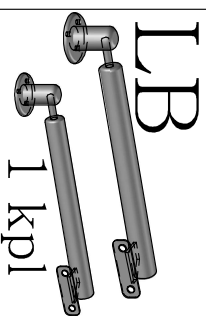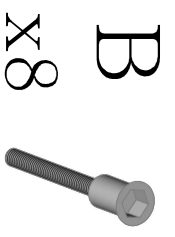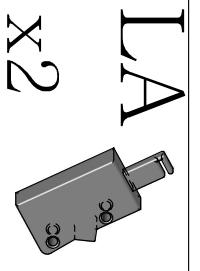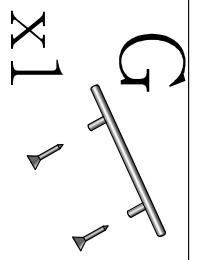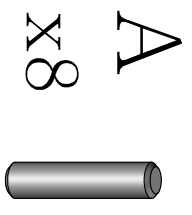

Assembly Instructions



2

G60-OK_

External tools needed for assembly: hammer, screwdriver

Perla

Optional tools :Power drill with screwdriver bit

260cm

Please follow steps