

Assembly Instructions



1/1

G80_






External tools needed for assembly: hammer, screwdriver

Perła

Optional tools :Power drill with screwdriver bit

260cm

Please follow steps

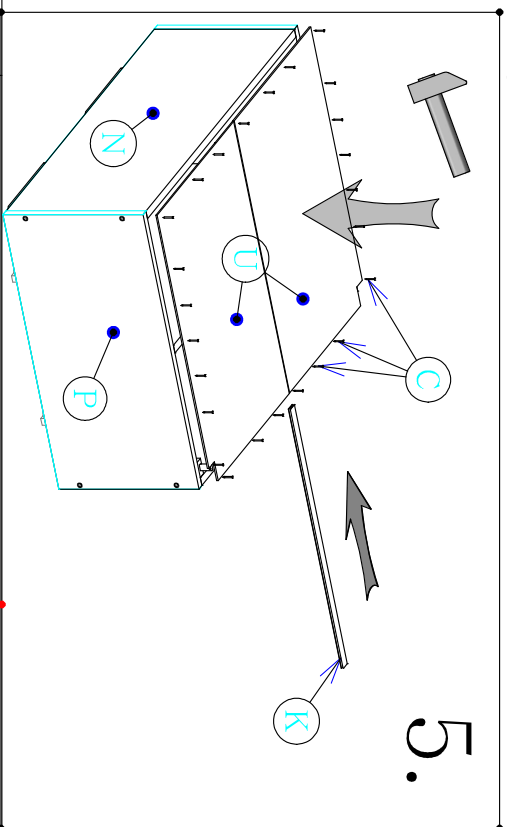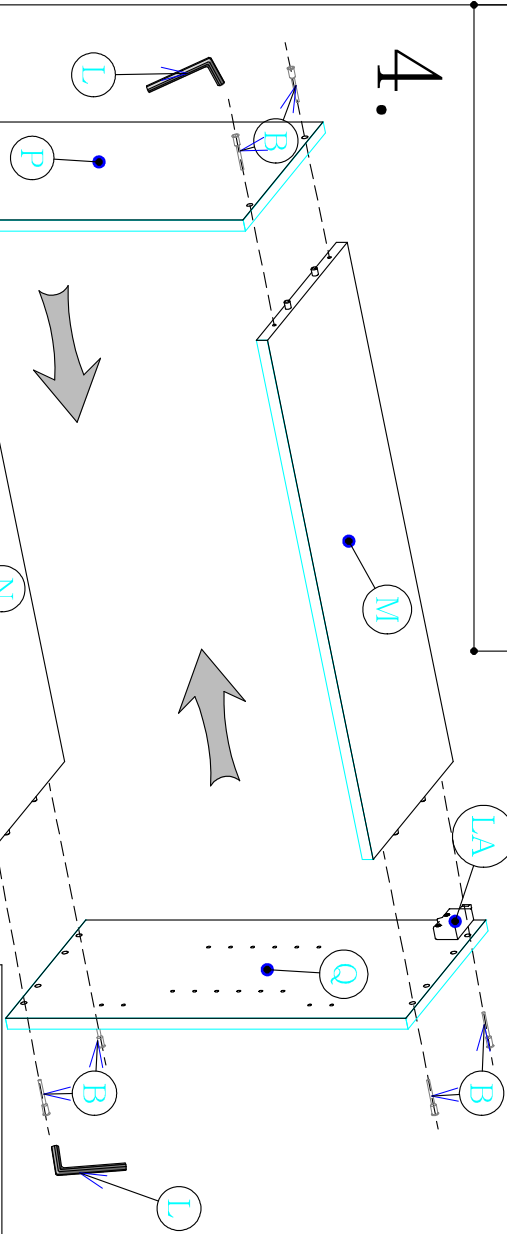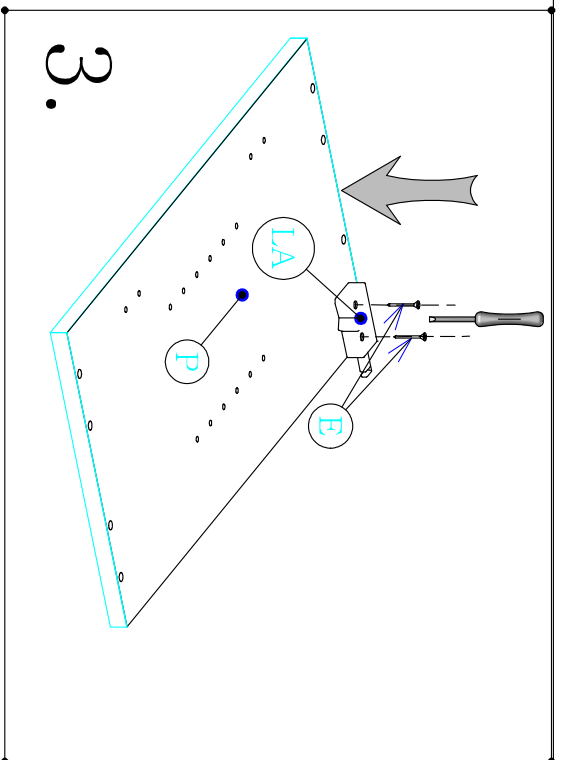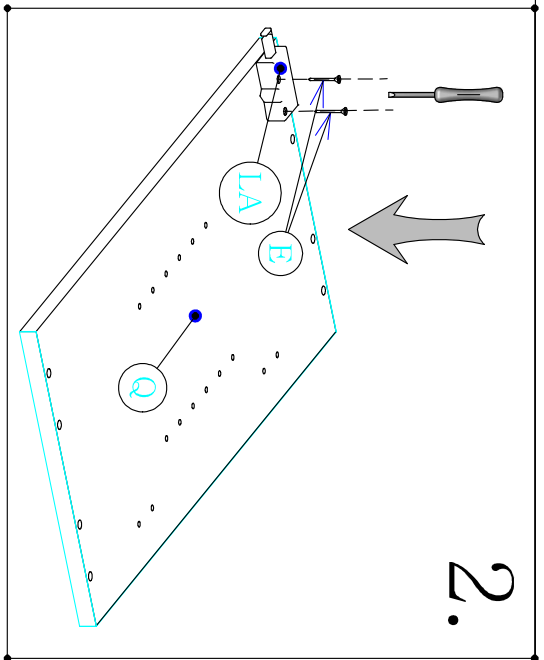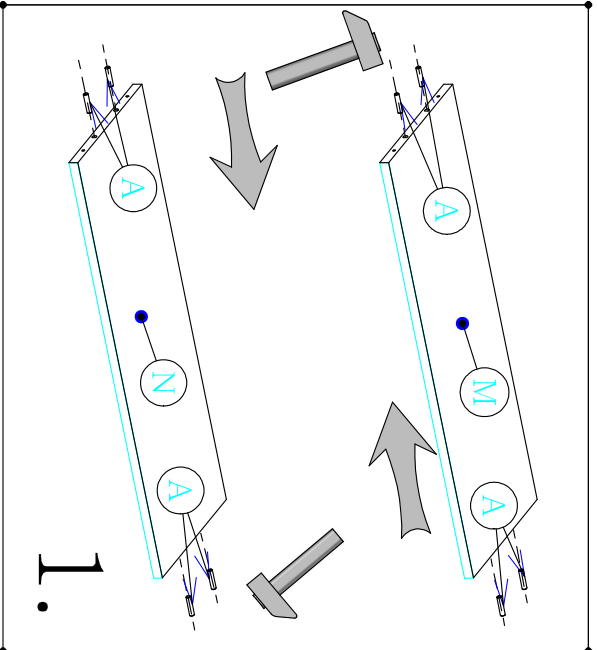

Assembly Instructions



1/2

External tools needed for assembly: hammer, screwdriver

Optional tools : Power drill with screwdriver bit

260cm

Pera







4.

1.

2.

3.

5.

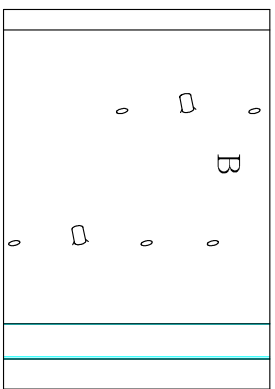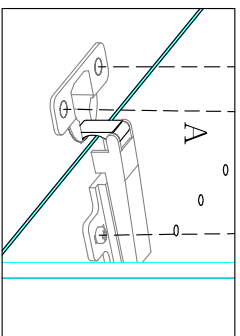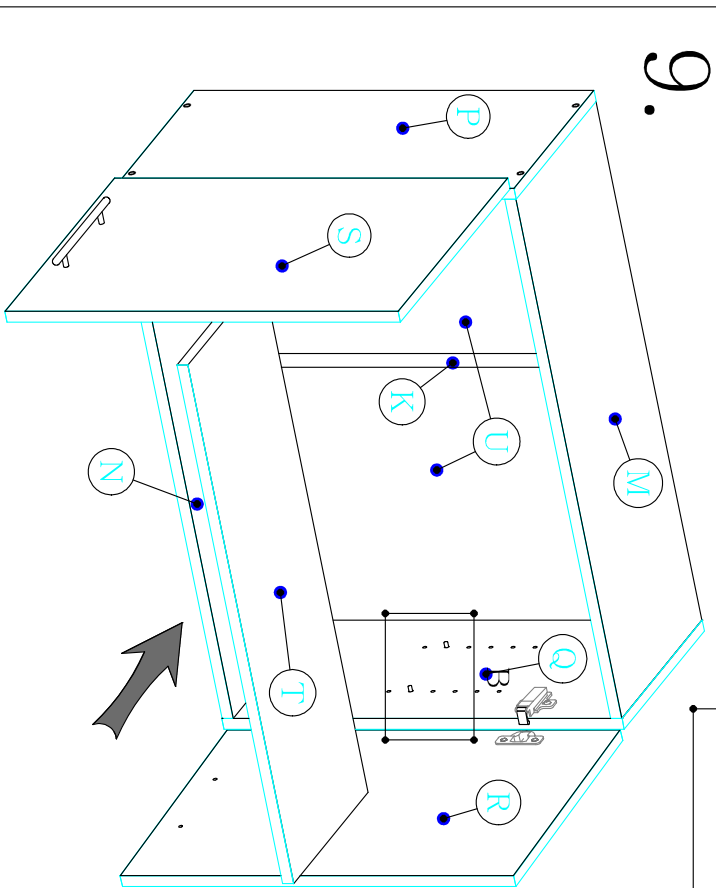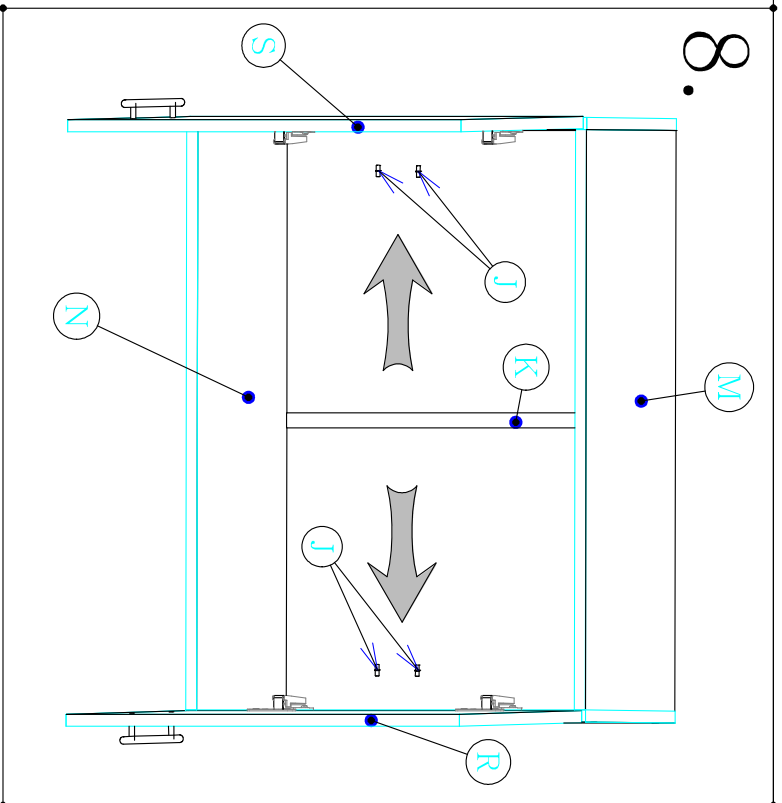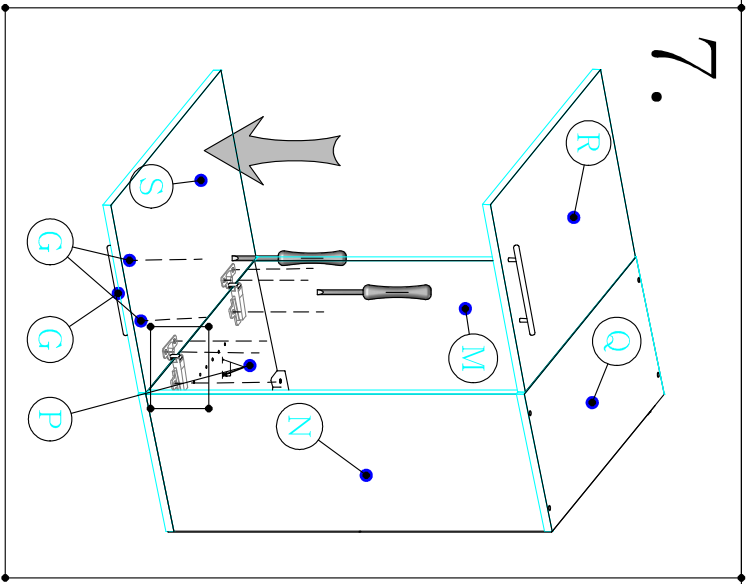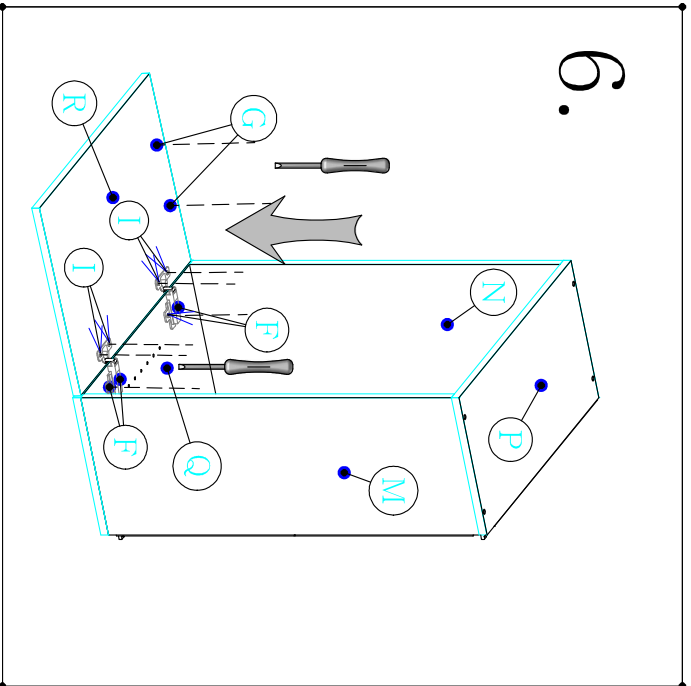

Assembly Instructions



2/2

External tools needed for assembly: hammer, screwdriver

G80

Optional tools :Power drill with screwdriver bit

Perta

Please follow steps

260cm